



division of Fiberglass Systems, Inc.

4545 Enterprise Street Boise, ID 83705

ph.: 800-727-9907 fax: 800-627-0929 www.best-bath.com

## Installation Instructions Specifications

### Curtain Rod Kit for models 3LRS4848B22B and PC4848B22B

**CRK4848**

#### Shower Curtain Rod Kit# CRK4848


consists of:

- 1 ea Curtain rod 44"x44"
- 1 ea Ceiling Flange with set screw
- 1 ea J-hook
- 6 ea #10x1-1/4" st. steel tek screws
- 2 ea #8x1" st. steel Phillips panhd. screws
- 2 ea #8 Zip-it nylon drywall anchors


#### Specifications

Curtain rod, 1" diam. x 20 gauge brushed stainless steel 44"x44" with welded, concealed flanges with snap-on covers.

Ceiling Flange with set screw for adjustable height, holding a J-hook (1/4" x 36" aluminum rod)

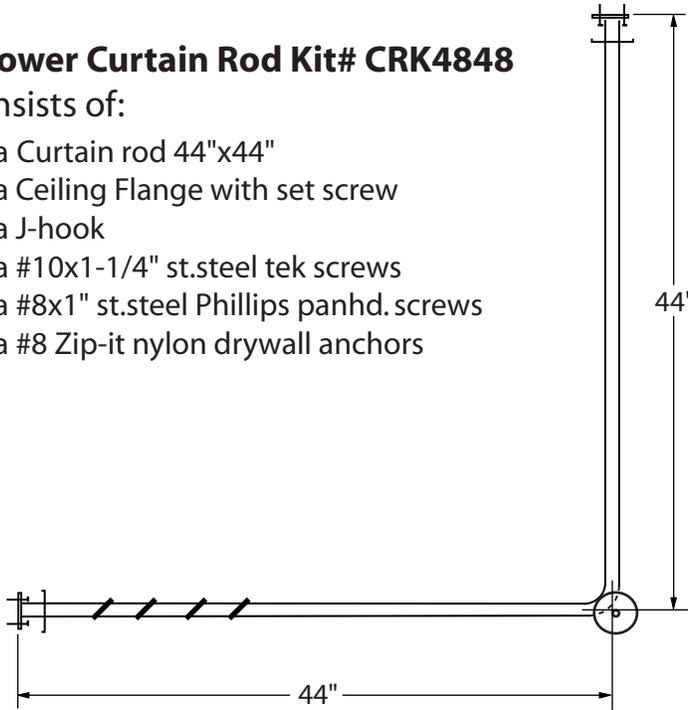

PLAN VIEW

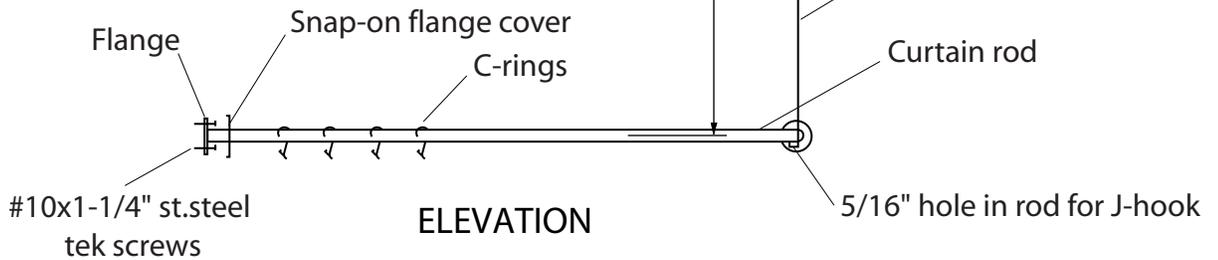

ELEVATION

#### Installation

Tools needed:

Screw gun, Phillips head bit, Pencil, Tape measure, Hacksaw, 1/8" Allen wrench

1. Attach the curtain rings to the rod.
2. Attach the curtain to the rings.
3. Hold the rod on the wall so that the curtain is 1/2" below that part of the shower curb where it will be hanging.
4. Mark the position of the curtain rod and remove the curtain from the curtain rod.
5. Install the curtain rod, making sure the hole in the corner is facing down.
6. Measure the distance from the bottom of the curtain rod (near the wall) to the ceiling and cut the J-hook accordingly.
7. Position the J-hook in the hole in the curtain rod and mark the ceiling, while making sure the J-hook is plumb.
8. Install the mounting flange in the ceiling with the Zip-it drywall anchors and the stainless steel sheet metal screws (included).
9. Slide the J-hook into the mounting flange and with the curtain rod level, tighten the set screw.



division of Fiberglass Systems, Inc.  
4545 Enterprise Street Boise, ID 83705  
ph.: 800-727-9907 fax: 800-627-0929 www.best-bath.com

## Installation Instructions Specifications

### Curtain Rod Kit for 5030 Walk-In Tubs

**CRK5030**

#### SHOWER CURTAIN ROD KIT# CRK5030


consists of:

- 1 ea. Curtain rod 46"x26"
- 1 ea. Ceiling Flange with set
- 1 ea. J-hook
- 6 ea. #10x1-1/4" stainless steel tek screws
- 2 ea. #8x1" stainless steel Phillips panhd screws
- 2 ea. #8 Zip-it nylon drywall anchors

#### Specifications

Curtain rod, 1" diam. x 18 gauge brushed stainless steel 46"x26" with welded, concealed flanges with snap-on covers.


Ceiling Flange with set screw for adjustable height, holding a J-hook (1/4" x 36" aluminum rod)

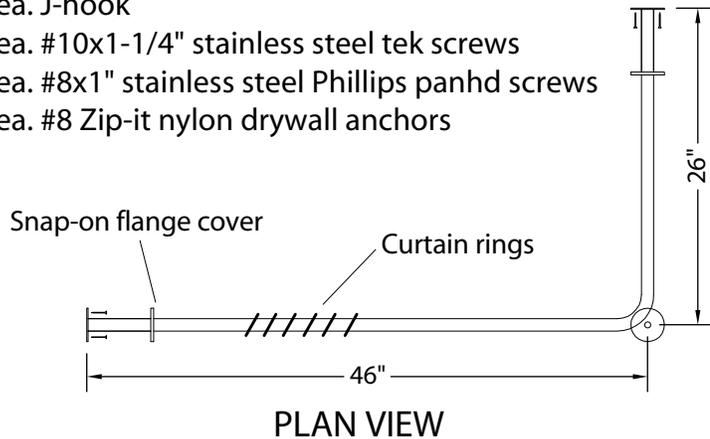

#10 x 1-1/4" lg stainless steel tek screws

Flange

#### ELEVATION

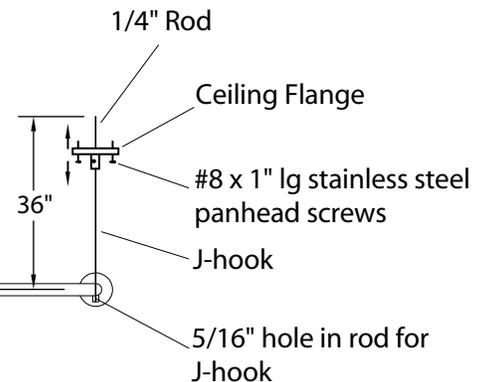

#### Installation

Tools needed:

Screw gun, Phillips head bit, Pencil, Tape measure, Hacksaw, 1/8" Allen wrench

1. Attach the curtain rings to the rod.
2. Attach the curtain to the rings.
3. Hold the rod on the wall so that the curtain is 1/2" below that part of the shower curb where it will be hanging.
4. Mark the position of the curtain rod and remove the curtain from the curtain rod.
5. Install the curtain rod, making sure the hole in the corner is facing down.
6. Measure the distance from the bottom of the curtain rod (near the wall) to the ceiling and cut the J-hook accordingly.
7. Position the J-hook in the hole in the curtain rod and mark the ceiling, while making sure the J-hook is plumb.
8. Install the mounting flange in the ceiling with the Zip-it drywall anchors and the stainless steel sheet metal screws (included).
9. Slide the J-hook into the mounting flange and with the curtain rod level, tighten the set screw.



division of Fiberglass Systems, Inc.

4545 Enterprise Street Boise, ID 83705

ph.: 800-727-9907 fax: 800-627-0929 www.best-bath.com

## Installation Instructions Specifications

# Curtain Rod Kit for model 4LESC6036BXX and P6030BXXB R/L

**CRK6036**

### Specifications


Curtain rod, 1" diam. x 20 gauge brushed stainless steel 56"x32" with welded, concealed flanges with snap-on covers.

Ceiling Flange with set screw for adjustable height, holding a J-hook (1/4" x 36" aluminum rod)

### Shower Curtain Rod Kit #CRK6036


consists of:

- 1 ea Curtain rod 56"x32"
- 1 ea Ceiling Flange with set screw
- 1 ea J-hook
- 6 ea #10x1-1/4" st. steel tek screws
- 2 ea #8x1" st. steel Phillips panhd. screws
- 2 ea #8 Zip-it nylon drywall anchors

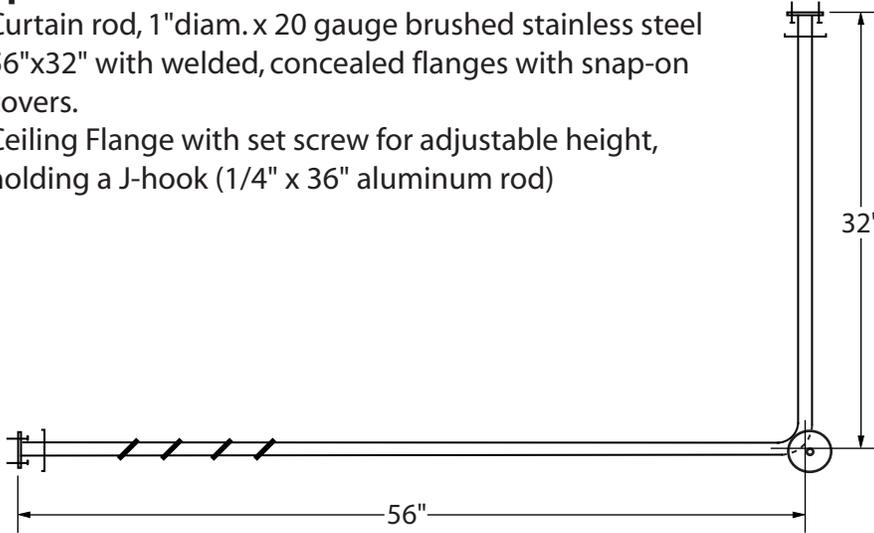

PLAN VIEW

ELEVATION

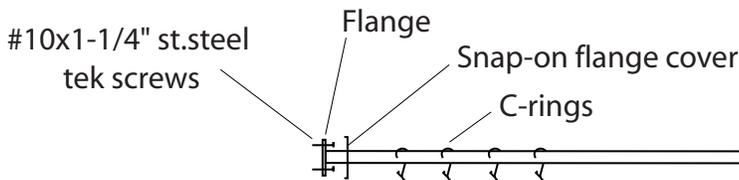

### Installation

Tools needed:

Screw gun, Phillips head bit, Pencil, Tape measure, Hacksaw, 1/8" Allen wrench

1. Attach the curtain rings to the rod.
2. Attach the curtain to the rings.
3. Hold the rod on the wall so that the curtain is 1/2" below that part of the shower curb where it will be hanging.
4. Mark the position of the curtain rod and remove the curtain from the curtain rod.
5. Install the curtain rod, making sure the hole in the corner is facing down.
6. Measure the distance from the bottom of the curtain rod (near the wall) to the ceiling and cut the J-hook accordingly.
7. Position the J-hook in the hole in the curtain rod and mark the ceiling, while making sure the J-hook is plumb.
8. Install the mounting flange in the ceiling with the Zip-it drywall anchors and the stainless steel sheet metal screws (included).
9. Slide the J-hook into the mounting flange and with the curtain rod level, tighten the set screw.



division of Fiberglass Systems, Inc.

4545 Enterprise Street Boise, ID 83705

ph.: 800-727-9907 fax: 800-627-0929 www.best-bath.com

## Installation Instructions Specifications

### Curtain Rod Kit for model 3LRS6048B22B

**CRK6048**

#### Specifications


Curtain rod, 1" diam. x 20 gauge brushed stainless steel 56"x44" with welded, concealed flanges with snap-on covers.

Ceiling Flange with set screw for adjustable height, holding a J-hook (1/4" x 36" aluminum rod)

#### Shower Curtain Rod Kit# CRK6048

consists of:

- 1 ea Curtain rod 56"x44"
- 1 ea Ceiling Flange with set screw
- 1 ea J-hook
- 6 ea #10x1-1/4" st. steel tek screws
- 2 ea #8x1" st. steel Phillips panhd. screws
- 2 ea #8 Zip-it nylon drywall anchors

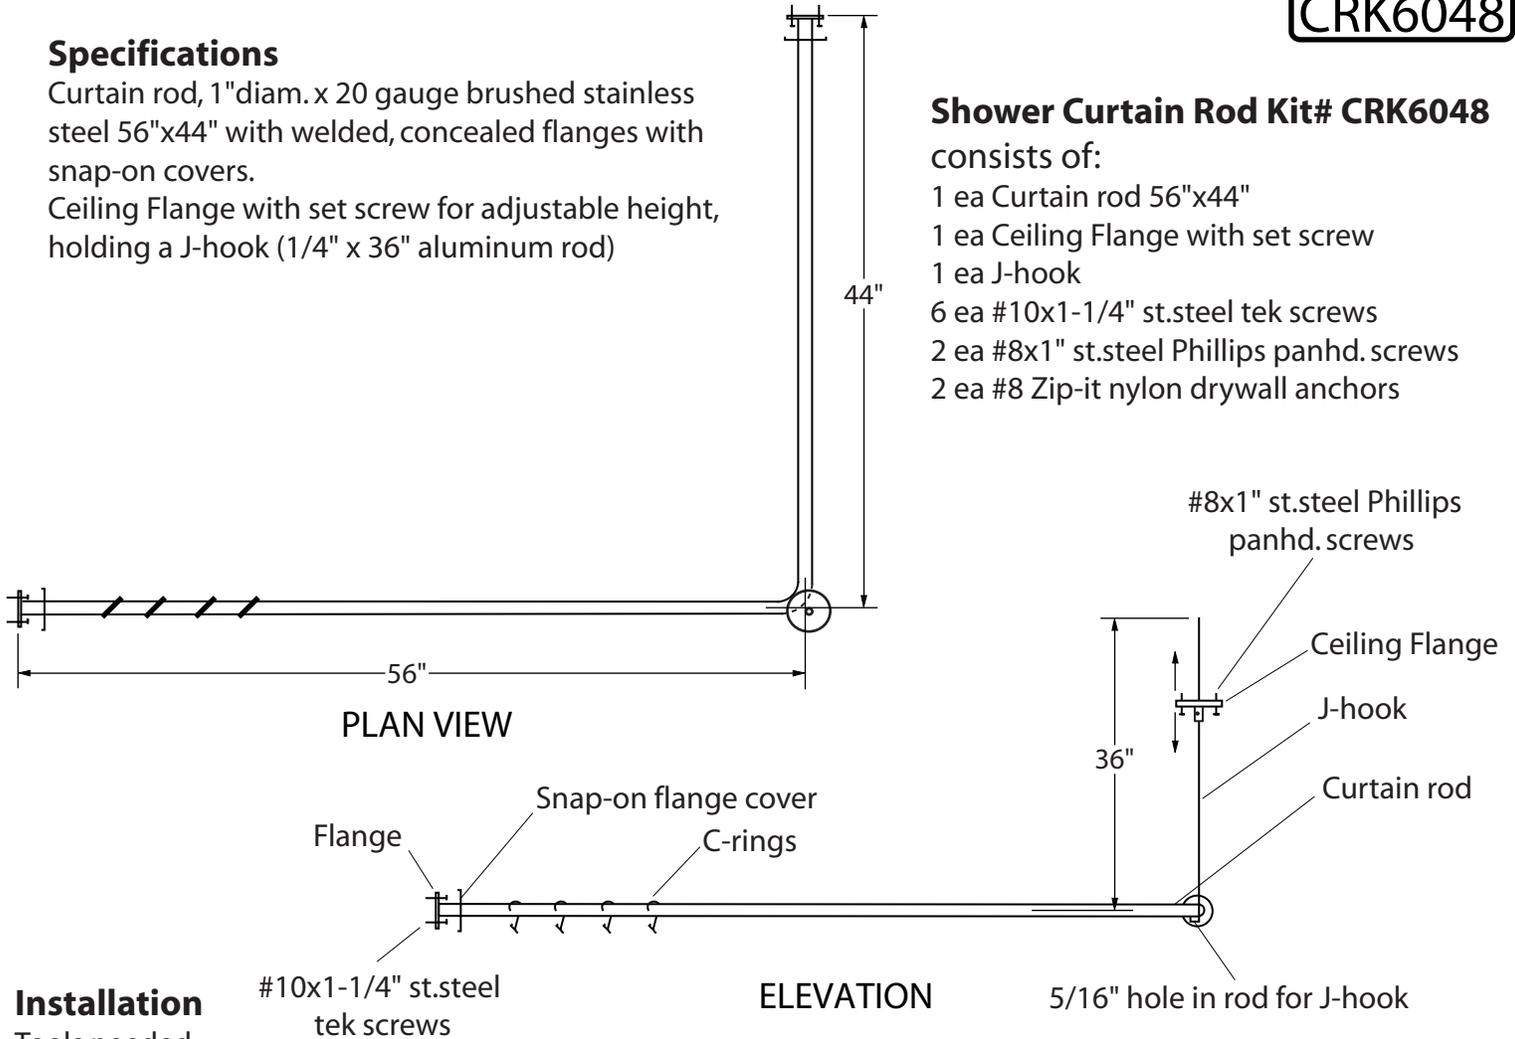

#### Installation

Tools needed:

Screw gun, Phillips head bit, Pencil, Tape measure, Hacksaw, 1/8" Allen wrench

1. Attach the curtain rings to the rod.
2. Attach the curtain to the rings.
3. Hold the rod on the wall so that the curtain is 1/2" below that part of the shower curb where it will be hanging.
4. Mark the position of the curtain rod and remove the curtain from the curtain rod.
5. Install the curtain rod, making sure the hole in the corner is facing down.
6. Measure the distance from the bottom of the curtain rod (near the wall) to the ceiling and cut the J-hook accordingly.
7. Position the J-hook in the hole in the curtain rod and mark the ceiling, while making sure the J-hook is plumb.
8. Install the mounting flange in the ceiling with the Zip-it drywall anchors and the stainless steel sheet metal screws (included).
9. Slide the J-hook into the mounting flange and with the curtain rod level, tighten the set screw.