

# Specifications

## Installation Instructions

### Flange Trim Kit

#### KFTKR3, KXFTKR3 & KFTKTR3

### Application

For use on remodel where either (Fig. A) the drywall is cut out to install the shower or (Fig. B) the drywall is damaged past the point where the shower with our narrower (1-1/4") molding #FTK-125 would not cover it.

### Installation

Measure the distance between the drywall at the back wall. Trim the sections to size with a hacksaw or sandpaper. Use the Power Grab adhesive to create mounds approximately 3/4" tall on the nailing flange and drywall at 8" intervals. Press the trim in place. Repeat with the remaining sections. Clear away any excess adhesive, and caulk around all edges with both 100% silicone and latex caulk as shown below.

### Material

Matching gelcoat fiberglass  
Install with Power Grab and caulk

### Kit consists of


- 1 ea Backwall section
- 1 ea Left front section
- 1 ea Left top section
- 1 ea Right front section
- 1 ea Right top section
- 2 ea Power Grab Construction Adhesive
- 1 ea 100% Silicone caulk

### Also needed

Latex Caulk (not included)

### Part Numbers

- KFTKR3 for 42"-83"
- KXFTKR3 for 83"-88"
- KFTKTR3 for 15"-42"

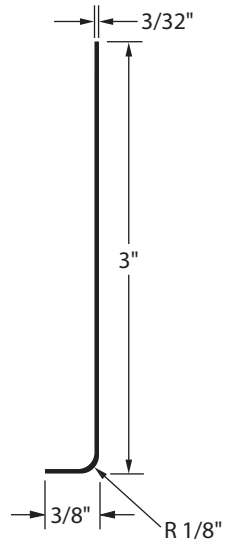

Cross Section of Trim


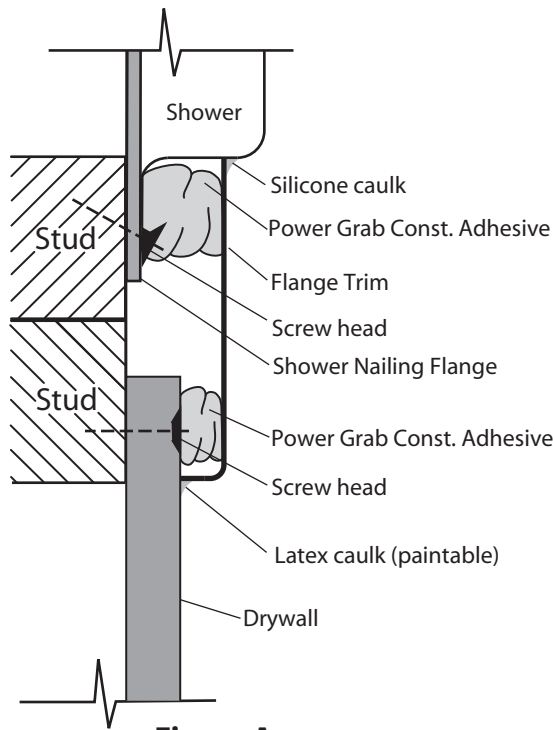


Figure A  
Typical Cross Section of Trim installed

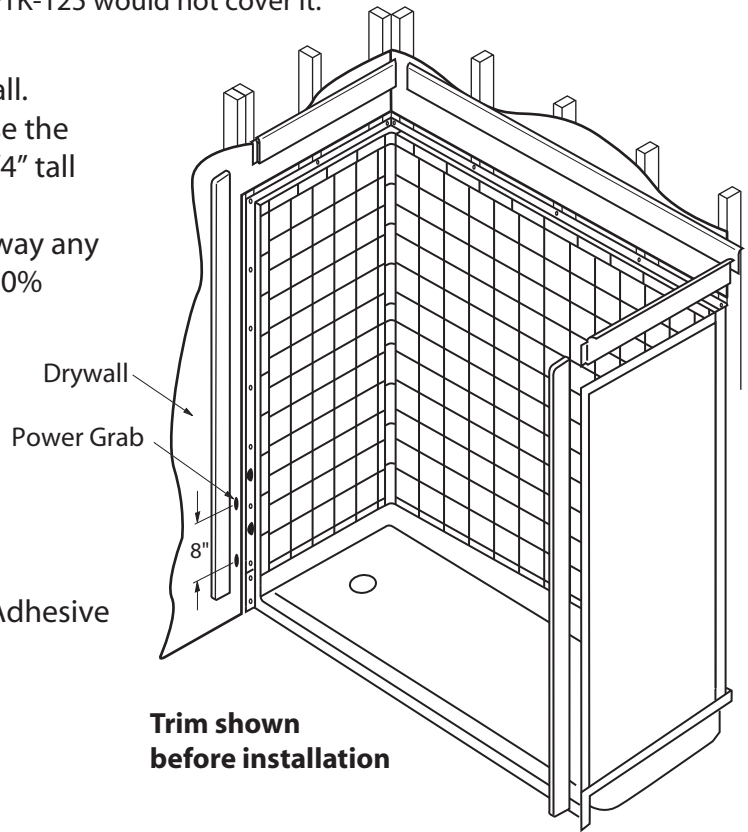

Trim shown before installation

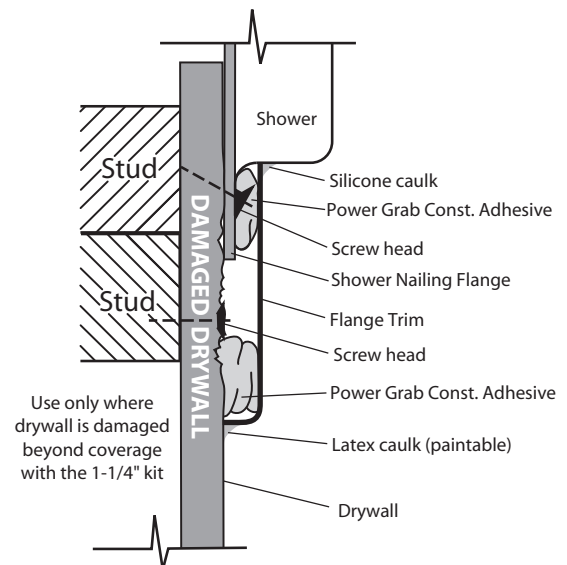


Figure B  
Non-Typical Cross Section of Trim installed with shower over damaged drywall